


Motorized Retractable Monitor

AX-22E

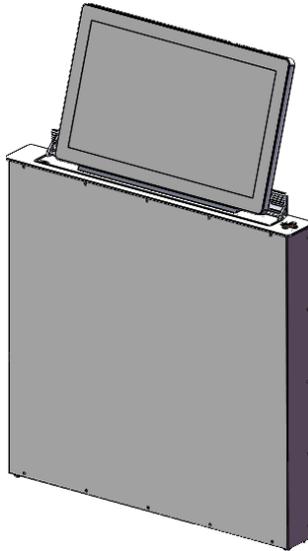

1. Operation instructions

1.1 packing list

NO.	description	Remark
1	Monitor lift	1set
2	Power plug	1pcs
3	RS-485 cable	1pcs
4	User manual	1set

1.2 Interface on the bottom case (from left to right)



- HDMI in
- VGA in (optional)
- AC 220V input power socket
- USB input, up: USB data, down: USB touch
- RS485 in (1: RS-485 +, 2: RS-485 -, 5: GND)。
- RS485 out (use for cluster control)
- Spare: PC SW power on; SA SW signal switch
- ANT Remote control (optional)

1.3 Control Introduction:

RS485 Software Control: 9 holes interface with the computer serial port. 232/485 intermediate bridge converter.



connector(female)

connector(male)

Top panel button:



Control Button: (The Red indicator light is power indicator, if it is red, mean no signal, green is with signal)

Icon	Button
	Stop
	Up
	Down
	PC power on/off
	Signal switch

1.4 Introduction to Manipulation

Display button :




- LED: indicated light, NO SIGNAL: the light is red, WITH SIGNAL: Light is green.
- : display power on/off


- ▼ : Variable Button(-)
- ▲ : Variable Button(+)
- AUTO: Automatic adjustment button and have return function.
- MENU

2. Characteristics and main parameters

2.1 Cut out size

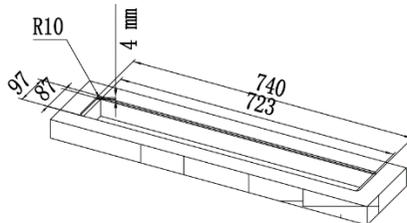

2.3 product size

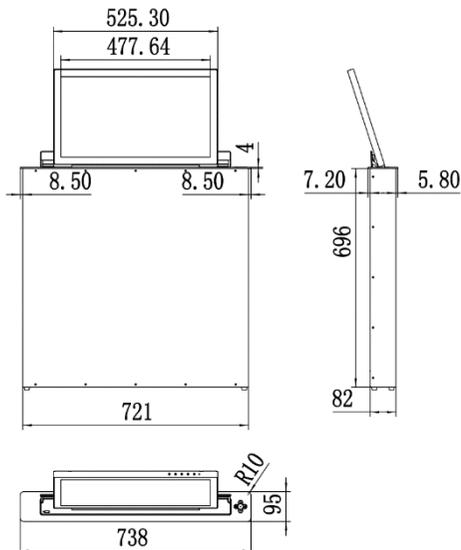

2.4 Technical parameters of lift

NO.	Item	data
1	Voltage	AC 220V 50HZ
2	Power consumption	<60W
3	Single running time	30S
4	Tilting	automatic 16°
5	Working temptation	0—50°C

2.5 Technical parameters of display screen

NO.	Item	Data
1	Screen size	21.5 inch
2	Resolution	1920*1080
3	Aspect ratio	16:9
4	Contrast ratio	1000:1
5	Brightness	250 cd/m ²
6	View angle	85/85/85/85

3. Installation instructions

3.1 Installation instructions

- Please remove safety screws & remove the foam inside the case before charging (the screws are in the, back, right & left side of cover plate)
- Put the lift into to table cutting hole, and flushing the panel with the table.
- Connect the video signal cable (VGA or HDMI).

-
- Connect the USB touch line, otherwise the touch screen will not work
 - For central control, please connect the RS485.
 - Connect the power, when the light is bright, push the button of “up/fall back” to finish the Automatic elevation process. After that, you could push “up/down” button to adjust the angle as you want.

3.2 Central control code

All up	FF AC E1 FF 00 00 DD 01 DC
Stop	FF AC E1 FF 00 00 CD 01 CC
All down	FF AC E1 FF 00 00 ED 01 EC

3.3 Computer App control

- If required, please contact us for RS485 control software “Multifunctional-Lift Control Center V2.0 _win”。
- Prepare a converter of RS232 to RS485 or USB to RS485, and install the driver, connect all the lift which need to be control
- Download and install the software in English version, log in as admin with pass word 88888888, please adjust the langue and the correct COM after access in.
- Operate the assembly according to the app instruction

4. FAQ and Solutions

4.1 Common Faults

NO.	Fault phenomenon	Reason
1	NO display	Check the power on or off? Check the signal, is it interrupted?
2	Character ambiguity	Does it match with the computer resolution? Is the contrast and brightness adjustment correct?
3	Black screen	It would turn off the brightness automatically without signal, Is brightness adjustment minimum? Long press of the "Auto" key may cause shutdown and the indicator to turn red.
4	Invalid touch function	Make sure the USB connection is correct or connect well
5	The indicator is not on	Check if the fuse is damaged. If it is damaged, replace the fuse with 3.15A specification.